

PHOTO-GLO LUMINARY

Dear Customer,

Congratulations on your purchase of a FLIPO® product. Our products will help to enhance the beauty of your home and provide many years of enjoyment. FLIPO® offers a wide variety of unique lighting products of the highest quality. To ensure the maximum performance of your flameless candle, please read and save these instructions.

BATTERY INSTALLATION

Remove the battery compartment lid; insert 2 C batteries as indicated on the candle bottom/battery compartment lid. It is advisable to place the candle on a soft surface to support it when installing or changing batteries.

AUTOMATIC TIMER

Your candle has three activation positions - OFF, 4 hour and 8 hour. When in the OFF position your candle will remain inactive. When the timer position is selected in either the 4 hour or 8 hour position at any given time of the day, the flickering light will turn on and then automatically turn off after the selected time duration. The following day, if the switch setting has not been modified, the flickering light will automatically turn on at the same time and will automatically turn off after either 4 or 8 hours depending on the interval selected. To change starting time, cycle the switch to OFF and back to either 4 hour or 8 hour at the desired time.

CANDLE SET UP/CHOOSING A LOCATION

After activating your luminary, place it on a flat surface. The luminary should not be exposed to extreme weather such as heat, cold, rain or snow and is intended for indoor use only.

LUMINARY/CANDLE LIGHT MAINTENANCE

To clean the luminary and candle wipe with a clean damp non-abrasive cloth. NEVER clean with detergent, bleach or other harsh chemicals; doing so will damage the surfaces of the luminary and candle.

CAUTION

1. This product is a flameless candle, to avoid fire hazard, do not light wick with fire.
2. NEVER remove the resin candle from the product's base.
3. The lantern is design for use with the flameless candle included in your product. It is not intended for use with real candles and should never be used in that way.
4. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
5. Do not mix old and new batteries.
6. For best results, use alkaline batteries.
7. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
8. Do not dispose of batteries in fire.
9. Batteries should be recycled or disposed of as per manufacturer's recommendations.
10. Do not put in a place exposed to constant direct sunlight.
11. FOR INDOOR USE ONLY!

BATTERIES NOT INCLUDED.

PHOTO-GLO LUMINARY

Dear Customer,

Congratulations on your purchase of a FLIPO® product. Our products will help to enhance the beauty of your home and provide many years of enjoyment. FLIPO® offers a wide variety of unique lighting products of the highest quality. To ensure the maximum performance of your flameless candle, please read and save these instructions.

BATTERY INSTALLATION

Remove the battery compartment lid; insert 2 C batteries as indicated on the candle bottom/battery compartment lid. It is advisable to place the candle on a soft surface to support it when installing or changing batteries.

AUTOMATIC TIMER

Your candle has three activation positions - OFF, 4 hour and 8 hour. When in the OFF position your candle will remain inactive. When the timer position is selected in either the 4 hour or 8 hour position at any given time of the day, the flickering light will turn on and then automatically turn off after the selected time duration. The following day, if the switch setting has not been modified, the flickering light will automatically turn on at the same time and will automatically turn off after either 4 or 8 hours depending on the interval selected. To change starting time, cycle the switch to OFF and back to either 4 hour or 8 hour at the desired time.

CANDLE SET UP/CHOOSING A LOCATION

After activating your luminary, place it on a flat surface. The luminary should not be exposed to extreme weather such as heat, cold, rain or snow and is intended for indoor use only.

LUMINARY/CANDLE LIGHT MAINTENANCE

To clean the luminary and candle wipe with a clean damp non-abrasive cloth. NEVER clean with detergent, bleach or other harsh chemicals; doing so will damage the surfaces of the luminary and candle.

CAUTION

1. This product is a flameless candle, to avoid fire hazard, do not light wick with fire.
2. NEVER remove the resin candle from the product's base.
3. The lantern is design for use with the flameless candle included in your product. It is not intended for use with real candles and should never be used in that way.
4. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
5. Do not mix old and new batteries.
6. For best results, use alkaline batteries.
7. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
8. Do not dispose of batteries in fire.
9. Batteries should be recycled or disposed of as per manufacturer's recommendations.
10. Do not put in a place exposed to constant direct sunlight.
11. FOR INDOOR USE ONLY!

BATTERIES NOT INCLUDED.